



WEB GUIDING SYSTEM



Low Profile Web Guide

Product Manual

Copyright Information

All of the information herein is the exclusive proprietary property of Roll-2-Roll Technologies LLC, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which it is disclosed.

Information in this document is believed to be reliable and accurate. However no responsibility is assumed as a result of its use nor for any inaccuracies, infringement of patent or other rights of third parties resulting from its use.

The information in this document is subject to change without any notice.

CONTENTS

INTRODUCTION	5
Web Guide Components	5
Web Position Sensor	5
Controller	6
Guide Mechanism	6
Key Features	6
Product Description	6
General Specifications	8
SAFETY INSTRUCTIONS	9
Instructions for Use	9
Proper Use	9
Improper Use	9
Pinch Points	9
Static Discharges and Grounding	10
INSTALLATION	11
Unpacking	11
Web Guide Mechanism Dimensions	11
Mounting Hole Pattern for the Web Guide Mechanism	13
Mounting the Web Guide Mechanism	13
Web Guide Installation Guidelines	14
Sensor Installation	15
Controller Mounting	16
Controller Installation	17
Power Input	18
Prewiring	18
Switchcraft DC Connector	18
Industrial DIN Rail Power Supply	18
Grounding	18
Sensor Ports	18
Motor Communication	19
Industrial Ethernet Interface	19
OPERATION AND OPERATOR INTERFACE	20
Main Operator Interface Screen	20
Automatic/Manual Operation	20
Servo-Centering Operation	21
Jog-left/Jog-right Operation	22
Guide Point Adjustment	23

Fine Guide Point Adjustment	23
Gross Guide Point Adjustment	24
Web Position Indicators	25
Web Detected Indicator	26
Sensor Position Indicator	26
Find Sensor Button	26
Communication Indicator	27
Advanced Settings	27
Motor Speed	27
Minimum Contrast	27
Edge/Contrast Web Position Sensing	28
Web Width	29
Analog Output	29
Digital Output	29
Remote Control and Monitoring	32
Output registers	32
Sensor status and fault registers	32
Sensor position output register	33
Quality factor registers	34
Web guide status and fault registers	34
Guide point percentage	36
Diagnostic index	36
Motor speed percentage	36
Sensor input registers	36
Sensor command register	37
Web guide command register	37
Guide point offset register	39
Motor speed register	39
Communication Module	40
IP Address	40
Finding the IP Address	40
Setting a static IP address for the controller	41
COMMISSIONING	43
General Maintenance	43
TROUBLESHOOTING	44
APPLICABLE MODELS	45
Sensor	45
Control Unit	45
Web Guide Mechanism	45

TECHNICAL SUPPORT AND SERVICE	46
Contact information	46
Return shipping instructions	46
REVISION HISTORY	47
Document Revision	47
Hardware Revision	47
Firmware Revision	47

INTRODUCTION

This product manual provides information about installation, use and maintenance of the Low Profile Web which is powered by the ARIS Web Position Sensors and the ARIS SCU5 controller. The web guiding system is designed for use in indoor industrial and laboratory equipment that process materials in web form as they move through a converting or raw material manufacturing process.

The web guiding system is a fully automatic mechatronic system used to accurately align/steer web materials within roll-to-roll machines. The web guide is used at critical locations where accurate alignment of web is necessary. Typical locations include at the unwind section, before process sections, such as before printing, coating, laminating, slitting, and rewind section. Accurate web guiding will improve productivity by enabling high speed transport and manufacturing.

Web Guide Components

There are three main components to a web guiding system:

1. Web position sensor
2. Controller
3. Guide mechanism

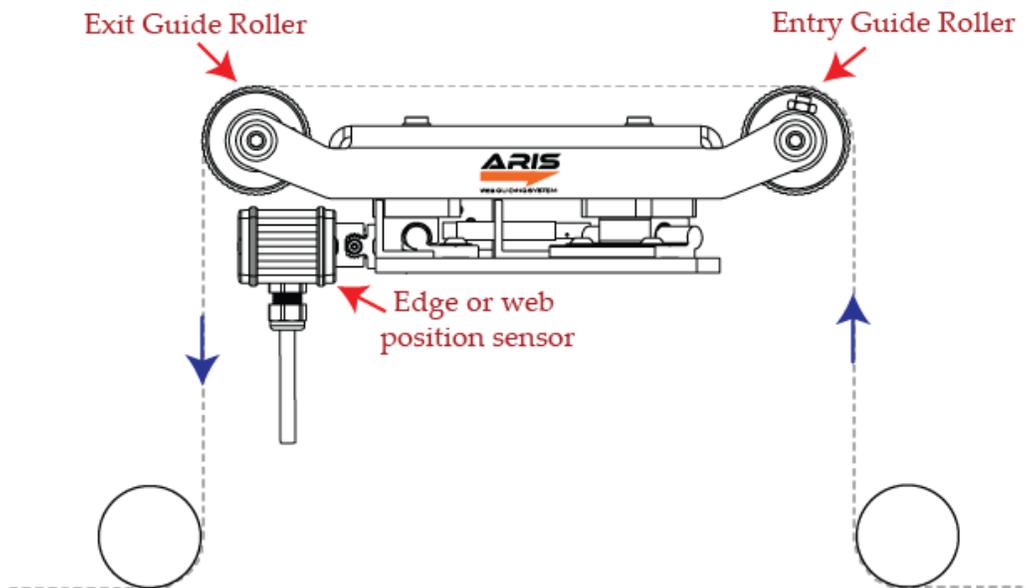


Fig. 1: Components of a web guiding system (Controller located remotely)

Web Position Sensor

The web position sensor provides the vision for the control system. The sensor measures the position of the web (edge or a contrasting feature on the web) and sends that information to the controller for corrective action.

Controller

The controller is the brain for the control system. Based on the sensor measurement the controller determines the corrective action necessary to accurately align the web material.

Guide Mechanism

The web guide mechanism is the muscle for the control system. The guide mechanism actuated by a motor physically steers or displaces the web to the required position based on the command from the controller.

Key Features

- **Simplicity:** The simplest web guide to install, operate and maintain.
- **No setup or re-calibration:** The intelligent control system adapts automatically to physical characteristics of the web material and web transport conditions to provide best performance without the need for re-tuning.
- **Plug-and-play system:** The sophisticated technologies within the system make the web guide simple to operate. There is no need to (1) select the type of sensor, (2) change controller gains, (3) change sensitivity or (4) perform any calibration. Everything is done automatically. Just connect the power and sensor to start guiding the web.
- **Compact design for easy integration:** The unique modular compact, aesthetic, and functional design makes it easy to install within tight spaces.

Product Description

The web mechanism includes a pivoting top roller platform, direct drive linear hybrid stepper motor actuator, and an optional servo center sensor. An exploded view of the web guide is shown in Fig. 2.



Fig. 2: Exploded view of the Low Profile Web Guide

Grooved rollers, mounted on the pivoting top roller platform, enable better traction between the web and the guide. High performance self cleaning plastic bearings are used for all the rolling and sliding contact surfaces on the roller platform. The roller platform is directly connected to a linear hybrid stepper motor. With its brushless design, the stepper motor offers precision positioning at high speed with minimum motor wear. Several different thrust and speed options are available with the hybrid stepper motor actuator. The motor driver and the actuator are pre-installed on the web guide mounting plate assembly.

The controller that can be mounted remotely from the web guide, includes a touch screen operator interface, the connectors for the sensor(s), optional industrial Ethernet, and the motor communication. One or two sensors can be connected to the controller for various applications such as edge, center or master/slave type control system.



Fig. 3: ARIS SCU5 MD Web Guide Controller

The sensor head houses the LED light source, the optics and the camera sensor. The sensor head is connected to the web guiding system through a shielded cable secured by a cable gland. The sensor head assembly is mounted onto an off-shelf aluminum rail (igus drylin N low profile linear rails with using NW-22-17-40 carriage) on web guide and is secured by M3 thumb screws. Other options with a manual or automatic sensor positioning with a lead screw is available upon request.



Fig. 4: Sensor head assembly

WARNING: Opening and disassembling the controller assembly or the sensor assembly without Roll-2-Roll Technologies' supervision will void warranty of the equipment. In case of any malfunction please contact support.

General Specifications

Roller Face (mm)	250, 300, 375, 425, 500 mm	Nominal Travel	± 16 mm
Nominal Temp	0-60° C	Correction Rate	Up to 42 mm/sec
Motor Type	Linear hybrid stepper	Maximum Tension	175 N
Input Supply	24 VDC	Linear Force	150 N
Control Frequency	50 Hz	Error Frequency	2 Hz

SAFETY INSTRUCTIONS

The Low Profile Web Guide is an electromechanical device that operates on low voltage (24 V DC). However, it does present a few safety requirements that must be followed in order to assure safe operation of the system.

Instructions for Use

The Low Profile Web Guide must be properly transported, stored before being installed professionally. The guide should not be installed or commissioned for operation if any visible damage is observed. Only persons who have the necessary qualifications should work on the installation, commissioning, operation, and maintenance of the web guide.

Notes:

- Please read the product manual and properly follow its instructions
- Please read and follow the warning labels on the device
- Be aware of all national, state, and local requirements for accident prevention and environmental protection.

Proper Use

The Low Profile Web Guide is intended for indoor uses only. The web guide is designed for use in industrial and lab equipment that process materials in web form as they move through a converting or raw material manufacturing process.

Improper Use

- The sensor uses high powered LED light source (visible or invisible) that may be harmful to human eye. Staring directly at the light source may harm vision and should be avoided.
- Outdoor use is considered improper.
- Any use outside the general specifications shall be considered improper use and voids any warranty of the equipment.
- Any replacement parts or modification necessities should be made by Roll-2-Roll Technologies LLC.

Pinch Points

- The gap between the top roller platform and the bottom assembly is a region with pinch points. The force of the actuator motor can cause damage to body parts, if caught, due to crushing.
- The gap between the rollers and the roller support plates must be considered a pinch point. The guide rollers are not powered and are only driven by the friction of the web on the rollers as the web travels over the rollers. However, while the material is threaded and transported over the guide rollers this creates pinch points between the web and the roller. Under no circumstance should the roller or the web be touched while the web is transported.
- Any installation, maintenance, or inspection work on or around the web guide must be performed when the power to the web guide is turned off or unplugged. It is recommended that caution should be exercised when handling the web guide under power to avoid having body parts caught in the pinch points.
- Please follow standard Lockout/Tagout procedure while performing any function near the web guide.

- The complete guide assembly has an estimated weight between 15 lbs and 25 lbs depending on the model number. Care should be taken when handling the guide during shipping, transportation, or installation to avoid crushing of body parts or of other equipment from impact due to mishandling of the guide and to avoid personal injury. The web guide system should be securely and properly assembled before placing it in operation. Internal safety rules should be observed during the assembly process.
- Low Profile Web Guide is an automatic control device that may stop and start at any time without notice, especially when controlled remotely. Hence standard safeguards must be in place to prevent any kind of injury.

Static Discharges and Grounding

- Web, especially plastic webs, when transported over rollers can create significant static voltage potential. This potential needs to safely discharged by proper grounding.
- The electronic elements of the web guiding system are sensitive to static discharges. Make sure that the web guiding system, the power supply, and the machine on which the web guide operates is properly grounded to avoid shock and the effect of static discharge.
- A grounding connector on the web guide may be used to safely ground the electronics within the web guiding system.

INSTALLATION

Unpacking

The Low Profile Web Guide will arrive packaged in a cardboard enclosure specially designed for the web guide. Although the packaging is designed to protect the product from shock due to transportation, care should be taken in handling the box with the guide to avoid damaging the device.

- When opening the container, make sure you open the box in the upright position. The upright position can be verified by the printing on the outside of the box.
- The sensor unit is shipped uninstalled from the web guide mechanism and will be packaged within the protective cardboard enclosures. Remove the protective cardboard enclosures carefully to avoid dropping the sensor assembly.
- The controller unit is shipped uninstalled from the web guide mechanism.

Web Guide Mechanism Dimensions

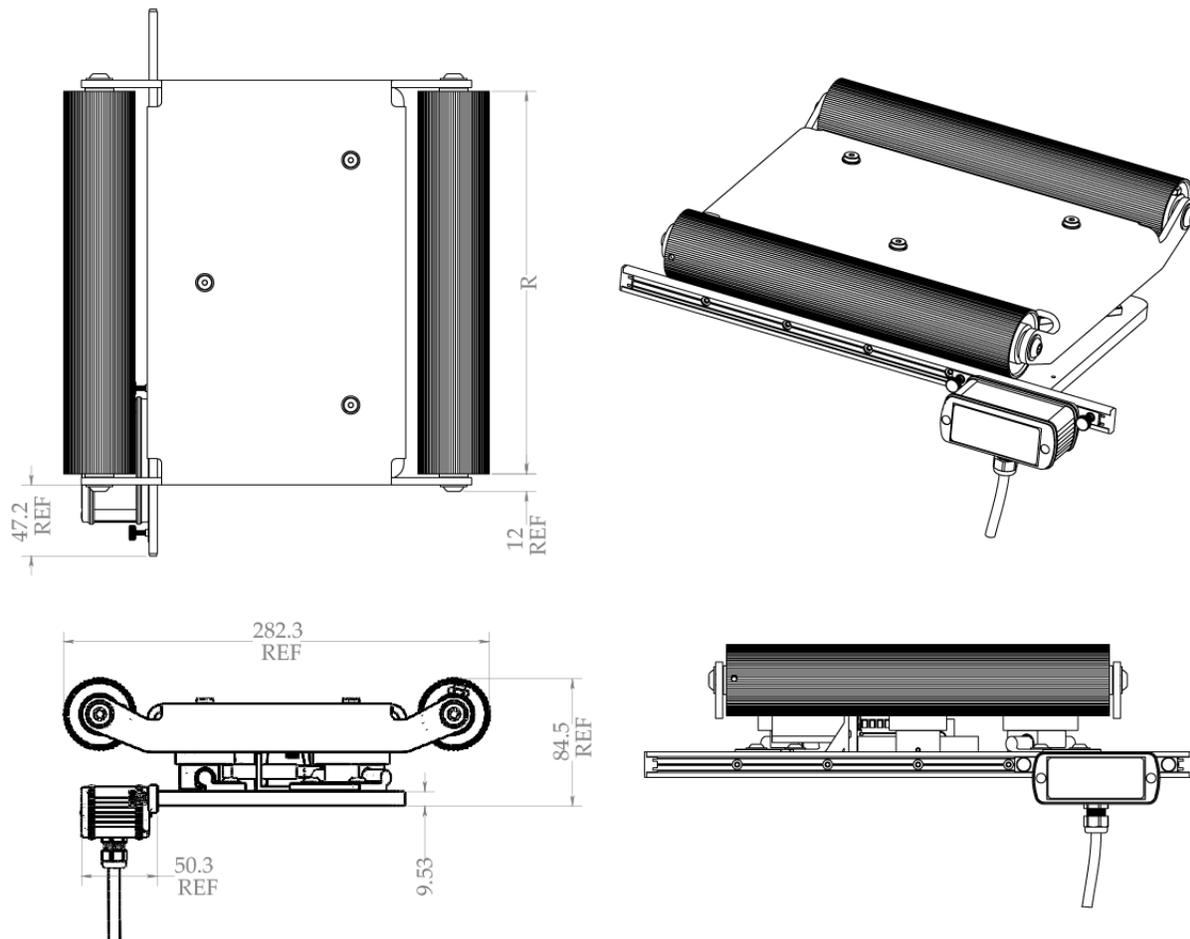


Fig. 4: Physical dimensions of the web guide: U-Pattern

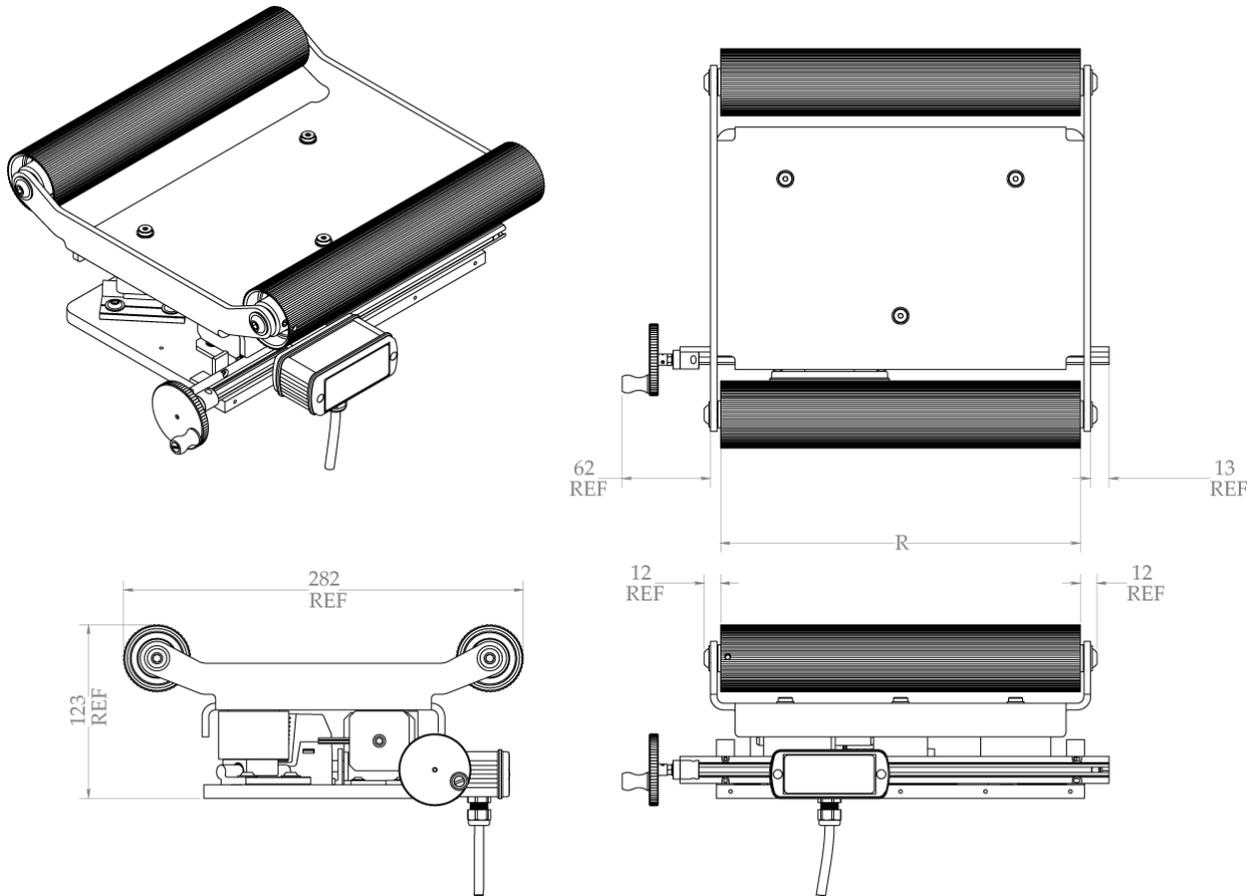


Fig. 5: Physical dimensions of the web guide: Z-Pattern

NOTES:

- All dimensions in mm
- Refer to table below for dimensions R

Roller Face inch [mm] R	Guide Span inch [mm]	Roller Diameter inch [mm]	Max correction inch [mm]	Max correction speed in/sec [mm/sec]
10 [254]	11.10 [282]	2 [50]	± 1.06 [27]	1.65 [42]
12 [304.8]				
15 [381]				
17 [431.8]				
20 [508]				

Two roller mounting options and two sensor mounting options are available as shown in Fig. 4 and Fig. 5. The standard option is shown in Fig. 4.

Mounting Hole Pattern for the Web Guide Mechanism

The mounting hole pattern, which is the same for all the different sizes with all the options, is shown below.

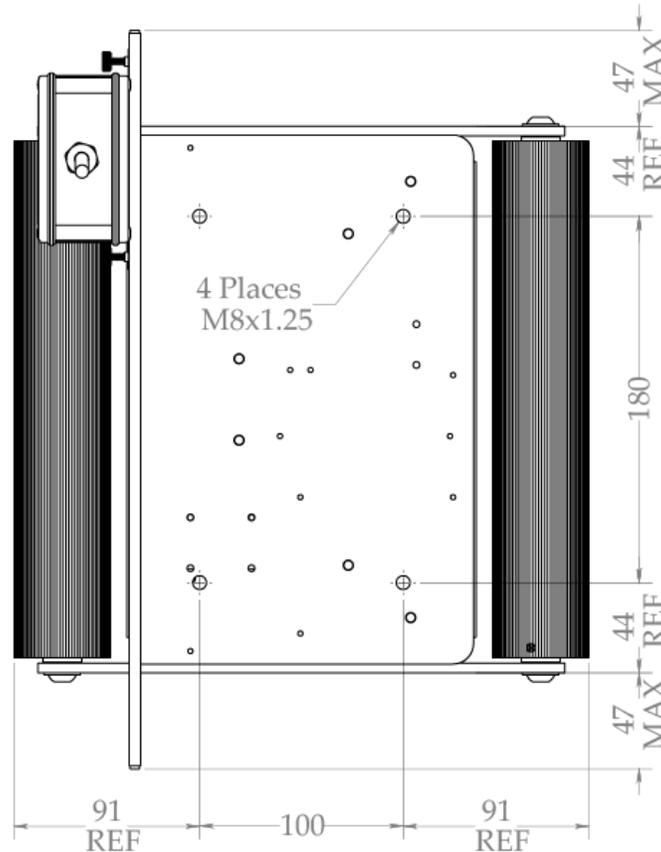


Fig. 6: Mounting hole pattern

Notes:

- The four threaded mounting holes (M8 x 1.25mm) can be used to secure the web guide to the machine frame with appropriate spacers. Depending on the mounting plate thickness, mounting screws lengths of 16mm to 22mm may be used.

Mounting the Web Guide Mechanism

Once the unit is outside of the packaging you may proceed to install the unit.

- The unit comes with four M8 threaded mounting holes located on the bottom of the web guide.
- Four M8 bolts and spacers may be provided with the web guiding system which can be used to mount the web guide on the machine frame.
- You may be required to prepare an installation plate to install the unit to your production machine. Make sure the guide is centered along the width of the web material.
- The guide has a downstream side and an upstream side. The downstream side will always have the sensor mounting rail underneath the downstream or exit roller.

- Make sure to install the guide with proper orientation by following the web direction marking on the roller platform assembly. The sensor must always be on the downstream side of material flow.
- Secure the guide to the machine by bolting the guide with the M8 screws.
- Tighten each bolt with a wrench by hand until each bolt is locked securely. Do not over tighten the bolts.
- The web guide mechanism a pre-wired motor communication cable that is at least 2 m long with a 4-pin M8 connector. Caution must be exercised while installing the web guide to prevent any accidental straining of the pre-wired motor communication cable.


WARNING: Do not drill any additional holes to the bottom of the web guide.

WARNING: For safety the web guide mechanism should be properly grounded using appropriate electrical grounding techniques.

WARNING: Avoid any straining of the pre-wired motor communication cable.

Web Guide Installation Guidelines

The desired installation guideline is provided in Fig. 7 below.

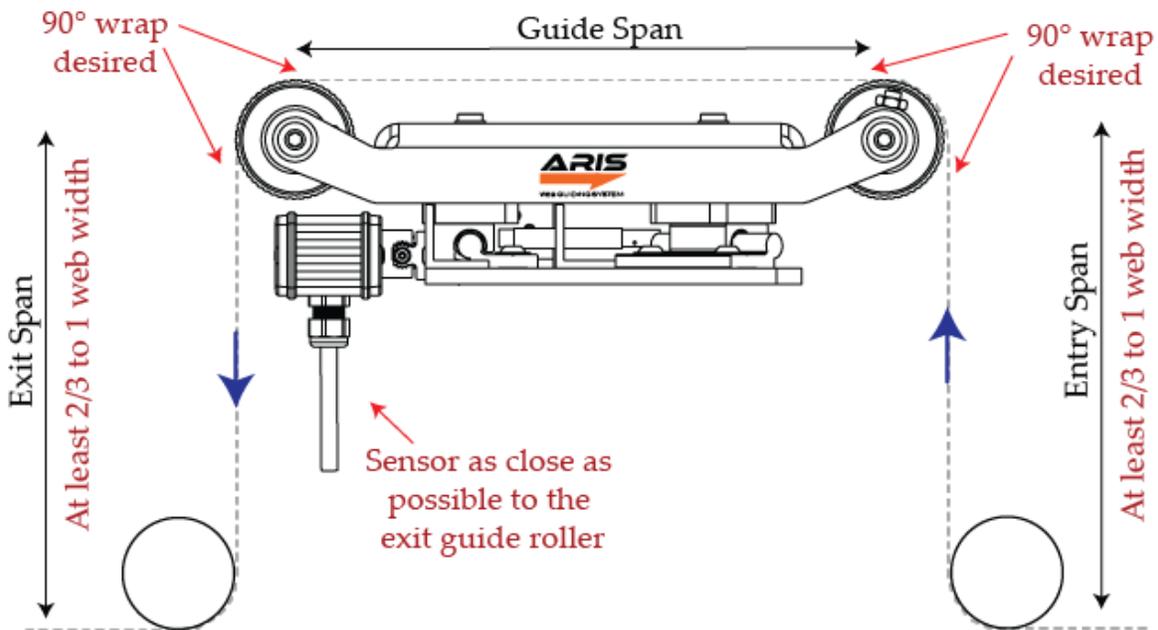

Displacement or offset-pivot guide installation guidelines

Fig. 7: Displacement Guide Installation Guidelines

The key installation considerations are:

- 90° wrap at the entry and the exit span of the web guide.
- An entry and exit span length of at least 1 web width for thin and flexible materials. Stiffer materials may require longer span lengths.
- Sensor installation as close to the exit guide roller.

Multiple web path options are available with the displacement web guide as shown in Fig. 8 below.

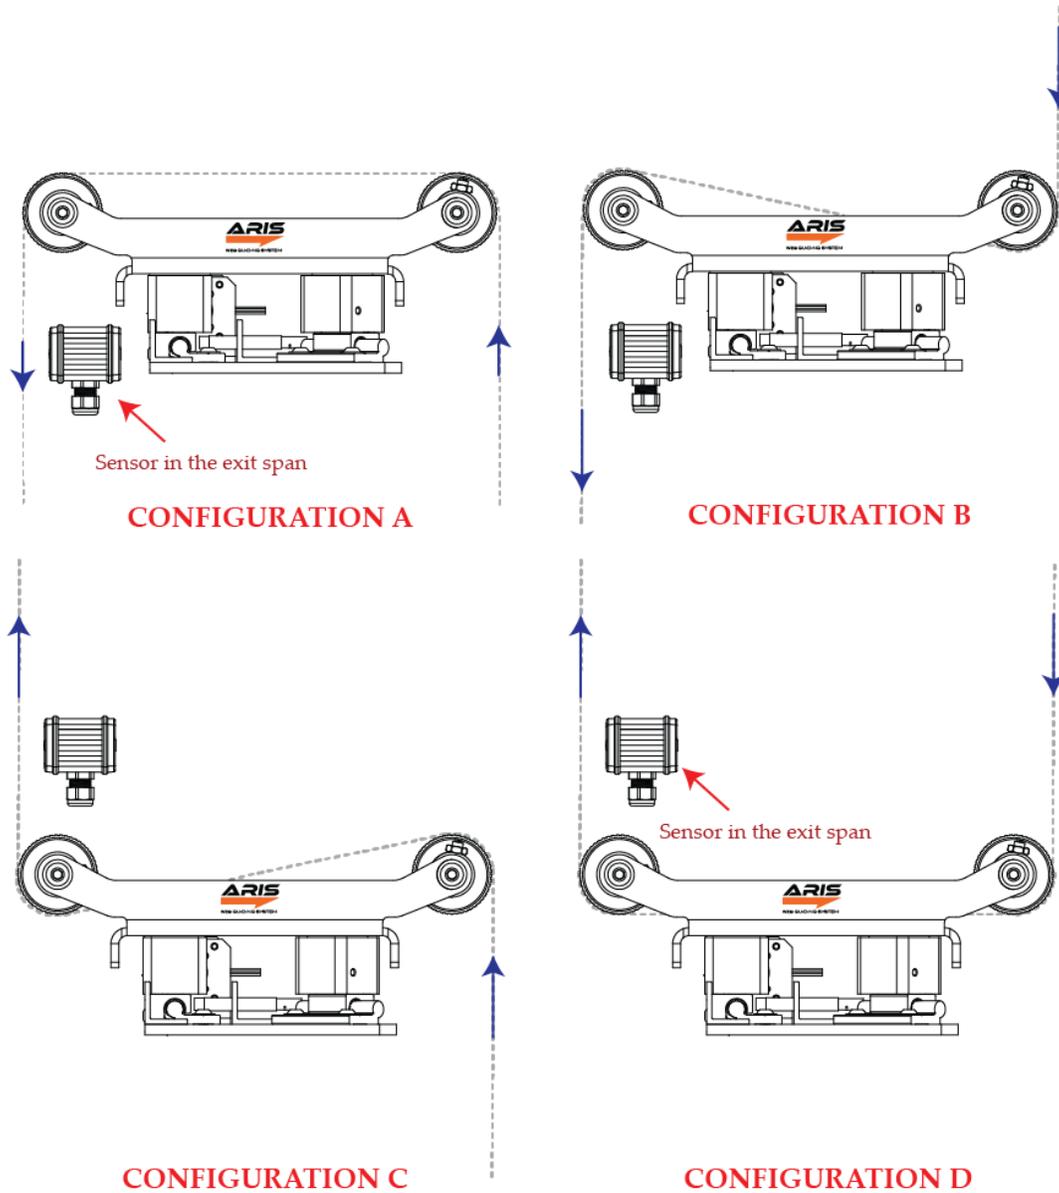


Fig. 8: Multiple Web Path Options available with the Z-Pattern

WARNING: The sensor orientation is important for web guiding applications. Always consult Roll-2-Roll Technologies LLC when installing the web guide in a non-standard configuration (B, C and D).

Sensor Installation

Two different types of sensor assembly are available. Standard sensor mounting option is shown in Fig. 4 and the option with lead-screw sensor positioner is shown in Fig. 5.

Please follow these instructions for standard sensor mounting option.

- The sensor assembly is composed of the sensor head, sensor cable, and two sensor slide carriages with M3 thumb screws. All these elements are factory shipped assembled as a ready to install unit.
- Each sensor slide carriage will have a locking thumbscrew. Unscrew both thumbscrews to allow the carriage to slide into the sensor rail that is mounted under the roller assembly on the downstream side of the web guide.
- The sensor face has a filter lid (infrared or visible filter lid). Make sure the filter lid faces the web material when the sensor assembly is slid into the guide rail.
- Once the sensor has been installed in the sensor rail, install the plastic end caps on the ends of the rail. The snap-on plastic end caps are typically provided with the web guide.
- A completed sensor installation looks similar to the one shown in Fig. 4.
- If two sensors are used, follow the same procedure to install two sensors.
- Optionally the sensor rail may be unmounted from the bottom plate and installed on the machine frame depending on the application need. The orientation of the sensor and the rail when mounted on the machine frame should match the orientation of the standard sensor mounting option as shown in Fig. 4.

Instructions for installing the lead-screw sensor positioner is as follows:

- The sensor assembly will be pre-installed on the lead-screw carriage.
- The lead-screw rail assembly will have four mounting holes (clearance holes for M2.5 screws).
- The lead-screw rail assembly may be mounted on the web guide frame using the supplied angle brackets or directly on the machine frame.
- The orientation of the sensor and the lead-screw rail when mounted on the machine frame should match the orientation of the standard sensor mounting option as shown in Fig. 5.

WARNING: *The sensor orientation is important for web guiding applications. Always orient the sensor such that the web guide mechanism and the sensor are both on the same side of the web.*

WARNING: *Even though the sensor working distance is less than 25 mm, the sensor operation may be affected by any object in the field of view of the sensor which is at a distance of 150 mm. Make sure that no object is present within this safe field of view range to ensure proper operation of the sensor.*

WARNING: *The infrared light source is invisible to the naked eye. Please do not stare directly into the sensor at any time. This can potential damage eyesight and may cause blindness.*

WARNING: *The white light source is visible to the naked eye. Please do not stare directly into the sensor at any time. This can potential damage eyesight and may cause blindness.*

WARNING: *The ultraviolet light source may be visible or invisible to the naked eye. Please do not stare directly into the sensor at any time. This can potential damage eyesight and may cause blindness. Avoid any skin exposure with the ultraviolet light source. The exposure may be potentially harmful.*

Controller Mounting

The Low Profile Web Guide is powered by the ARIS SCU5 controller. The controller can be mounted remotely from the web guide mechanism at a safe location (outside guard doors) that is easily accessible to the operator. Wall mounting brackets are provided on the controller for installation as shown in Fig. 9. M3 or

M4 mounting screws may be used to securely mount controller. Do not drill any additional holes on the enclosure. Appropriate grounding methods should be followed to ground the metal enclosure to the earth ground for safe operation.

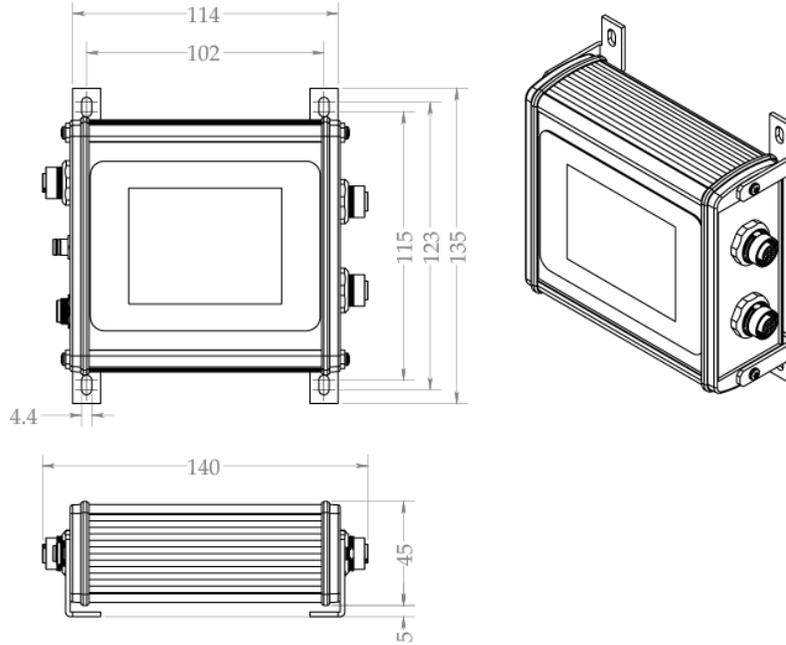


Fig. 9: ARIS SCU5 physical dimensions

Controller Installation

The ARIS SCU controller has the following ports available for operation.

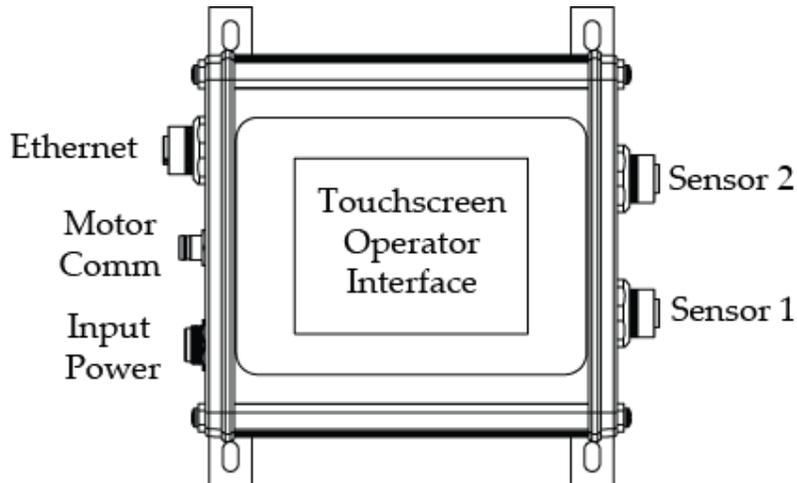


Fig. 10: ARIS SCU5 connector ports

Power Input

The ARIS Web Guiding operates under 24 VDC ($\pm 5\%$) power with a maximum current of 5 Amps. There are two power port options available: (1) pre-wired or (2) power jack connector based on the order.

Prewiring

In the pre-wired option, the unit may come with a 2.5 meter long power cable (through a gland nut) for the customer to connect to an appropriately grounded 24 VDC power source. There are three conductors in the power cable. The red colored conductor is the 24V power, the black colored conductor is the DC return or electronic circuit ground.

Switchcraft DC Connector

Sealed Switchcraft L712AS power jack port option is available on the SCU5. A mating Switchcraft 761KS12 plug connector or a pre-assembled Switchcraft CARA761KS07984 or a pre-assembled Switchcraft CA761KS07984 can be used to supply power. For the plug connector the 24 VDC power should be supplied to the tip/center pin and electronic ground on the sleeve pin. For the cable assembly the 24 VDC should be connected to the red cable and the electronic ground connected to the black cable.

Industrial DIN Rail Power Supply

Industrial DIN rail mountable power supply such as Mean Well SDR-75-24 can be used to supply the 24VDC power. This is an available purchase option.

Grounding

For safety and for normal operation, the Low Profile Web Guide, the equipment to which the web guide is installed must be properly grounded. The controller should also be appropriately grounded. The metal enclosure surface or the mounting screws may be used to properly earth ground the controller.

WARNING: *Even though the mounting holes provide grounding of the Low Profile Web Guide, please use all possible options to safely earth the web guide. Improper grounding may result in static buildup that can potentially result in malfunction of the web guiding system.*

Sensor Ports

Two sensor ports labeled Sensor 1 and Sensor 2 have industry standard 12-pin M12 connectors to connect the 12-pin connector on the sensor cable. Either sensor ports can be used to connect the sensor(s) and the controller will automatically recognize the connection. The connectors are key and please do not force the connectors.

NOTE: *If two sensors are connected the web guide will automatically configure the appropriate guiding mode based on the sensor installation. If both the left and the right edge is seen by the sensor, the center guiding mode will be enabled. If both the sensors see the same edge of the web then an average of the sensor measurement will be used to guide the web.*

WARNING: *Only the sensors and cables provided by Roll-2-Roll Technologies LLC should be connected to the sensor ports. Third-party cables and sensors may damage the controller and will void warranty.*

Motor Communication


A 4-pin M8 connector is provided to connect the controller to the actuation system installed on the web guide mechanism. The pre-wired cable with the 4-pin M8 connector from the web guide mechanism should be connected to the motor communication cable. The motor communication cable carries the power and the communication signals between the ARIS SCU5 controller and the motor driver.

WARNING: Never connect or disconnect the motor communication cable while the ARIS SCU5 is powered or connected to a power supply. Always power down the ARIS SCU5 controller during the connection/disconnection operation.

WARNING: Only the cables provided by Roll-2-Roll Technologies LLC should be connected to the motor communication port. Third-party cables and sensors may damage the controller and will void warranty.

Industrial Ethernet Interface

An optional industrial ethernet connection to the web guiding system is available on certain models. A 4-pin D-coded M12 socket connect is provided for ethernet connection. Standard network cables such as Phoenix Contact NBC-MSD/ 1,0-93E/R4AC SCO - 1407360 or VS-MSD-IP20-93E/5,0 - 1403500 can be used to connect the ARIS SCU to an ethernet network using RJ45 plug.

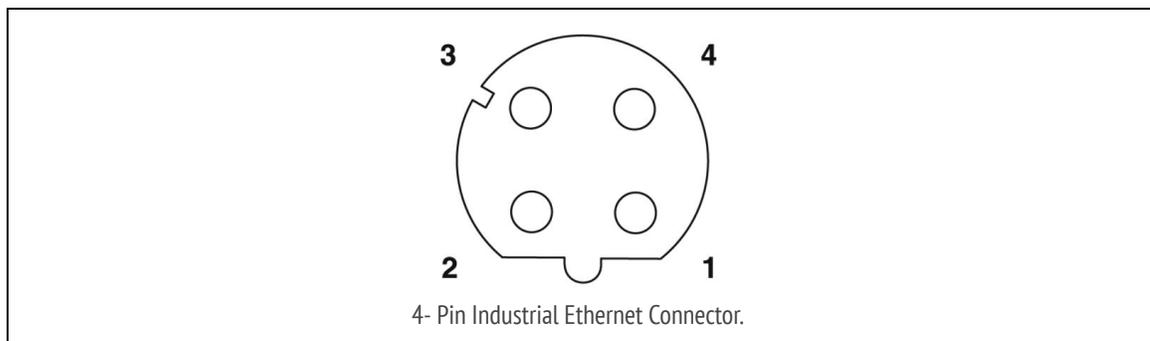

A set of input and output registers are available to monitor and control the ARIS SCU.

OPERATION AND OPERATOR INTERFACE

Main Operator Interface Screen

The Low Profile Web Guide operation is accomplished through the main operator interface located on the web guide; some models may have remote operator interface. The interface uses a language independent icon based screen that allows ease of operation. Fig. 11 shows an image of the Operator Interface screen:



Fig.11: ARIS Operator Interface (Manual Mode)

The interface is a resistive touch screen panel. Never use sharp or pointed tools of any kind to operate the interface. Best practice is to have operators use their fingers to press the different icons. Care must be taken to clean the touch screen surface periodically.

Its icon based design allows for a language independent operation without the need of translation of the screen for setup and operation in different countries.

Automatic/Manual Operation



Manual



Automatic

The web guide can be put into manual or automatic operation mode by pressing this icon. The guide is in manual operation when the icon is red and is in automatic mode when the icon is green. When the guide is in manual mode and the icon is pressed, the guide will switch to automatic mode. When the guide is in automatic mode and the icon is pressed the guide will be put into manual mode.

- The guide should be placed in manual operation during initial setup of the guide, or during routine maintenance of the production line.
- The guide must be placed in automatic operation when the production line is in production mode.

WARNING: Changing from one mode to another can result in change in the web guide position causing process upsets. Caution must be exercised when changing the operating mode and should be done by those who completely understand the consequence of this change.

WARNING: No personnel should be manually handling the web guide or the material around the web guide when the guide is in automatic operation. Failure to follow this warning could result in crushing of body parts at pinch points around and within the web guiding system.

WARNING: Care must be taken that only one person is working on the guide when it is in manual operation. Failure to follow this warning could result in crushing of body parts at pinch points around and within the web guiding system.

A few icons on the operator interface are enabled or disabled as the web guide is switched between manual and automatic mode based on the available options in each mode. Fig. 12 shows the operator interface while the web guiding system is in automatic mode. The advanced setup and sensing mode icons are disabled.



Fig. 12: ARIS Operator Interface (Automatic Mode)

Servo-Centering Operation



Servo-centering off



Servo-centering on

The servo-centering operation automatically centers the guide roller assembly of the guide.

- During normal operation the icon will be in red.

- Upon pressing the icon, the icon turns green and the guide automatically moves the rollers to a factory preset center position. Once centered the icon returns to red indicating that it has finished the procedure and that servo-centering is off.

The servo center feature allows the guide to be centered quickly to facilitate threading of the web during changeover.

WARNING: Servo centering operation result in change in the web guide position causing process upset. Caution must be exercised when performing this function and should be done by those who completely understand the consequence of this change.

WARNING: Servo centering can be performed only when the web guiding system is in manual mode. Pressing the servo center icon during automatic operation will perform a different function.

WARNING: This is an automatic procedure of the web guiding system. No personnel should be performing manual work on or around the guide during the servo-centering procedure. Failure to follow this warning could result in crushing of body parts at pinch points around and within the web guiding system.

Jog-left/Jog-right Operation



Jog-left off



Jog-right off



Jog-left on



Jog-right on

The Jog-left/Jog-right icons allow the operator to manually move the guide roller assembly to the left or to the right as needed. These operations can be performed only when the web guide is in manual operating mode.

- The Jog-left/Jog-right operation icon indicates the operation is off when the icon is red.
- When the operator turns the Jog-left or Jog-right ON by pressing the icon, the guide will start moving to the left or right position. The respective icon will turn green during the Jog operation and will turn back to red when the operation is stopped.

The Jog operation can be stopped at any time by pressing the respective icon any time during the jog. If the guide reaches the extreme position, the jog operation will stop automatically. This operation can only be performed when the guide is in manual setting.

The left position of the guide is defined as the left side of the guide if the operator is viewing the guide from the downstream position (facing the sensor). Similarly, the right position of the guide is defined as the right side of the guide if the operator is viewing the guide from the downstream position.

WARNING: Jog-Left and Jog-Right operations result in change in the web guide position causing process upset. Caution must be exercised when performing these function and should be done by those who completely understand the consequence of this change.

WARNING: Jog-Left and Jog-Right operation can be performed only when the web guiding system is in manual mode. Pressing the icons during automatic operation will perform a different function.

WARNING: This is a manual procedure of the web guiding system. No personnel should be performing work on or around the guide during the jog procedure. Failure to follow this warning could result in crushing of body parts at pinch points around and within the web guiding system.

Guide Point Adjustment

The guide point of the web guiding system (reference or the desired location of the web with respect to the sensor) is set to 50% of the sensing window of the sensor when shipped from the factory. In this setting the web will be guided to a position exactly in the middle of the sensing window. The guide point can be adjusted to a different location within of the sensor range. This setting is absolute irrespective of the sensor position. The current guide point setting is indicated by the guide point indicator as shown in Fig. 13.

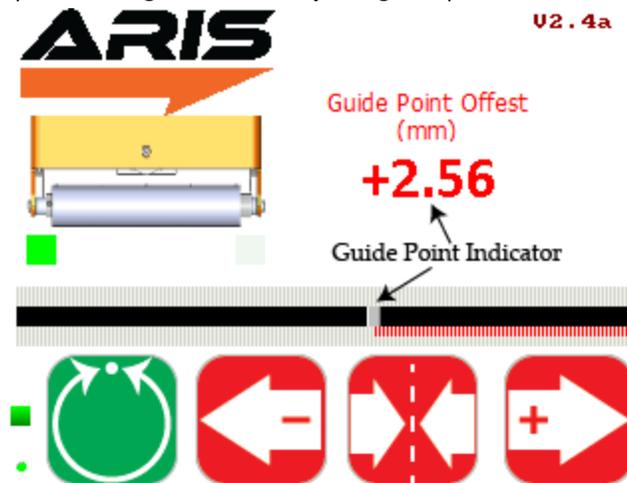


Fig. 13: Guide Point Indicator

The visual guide point indicator is a track bar that provides an easy and quick visual indication of the web edge position with respect to the current guide point. Under normal conditions, the web position should align with the guide point while the web guide is in automatic control mode. A numerical guide point indicator displays the numerical value of the guide point offset on the screen.

The guide point can be adjusted in two ways: fine guide point adjustment for small incremental adjustments and gross guide point adjustment for large step change to the guide point.

Fine Guide Point Adjustment

The fine adjustments to the guide point can only be made when the web guide is in automatic mode. These adjustments enable small incremental changes to the guide through the operator interface to enable operators to move the desired guiding position of the web. The fine adjustment to the guide point can be

made by pressing the left (-) or right (+) arrow icons on the operator interface while the web guiding system is in automatic mode. Every single touch of the left or right icon will respectively decrease or increase the guide point by 0.256 mm. This change is immediately displayed by the visual guide point indicator and the numerical guide point indicator. Pressing the middle icon (servo-centering icon) will reset the guide point to 50% or 0 mm guide point offset.



Fig. 14: Fine guide point adjustment

Gross Guide Point Adjustment

The gross guide point adjustment is intended for making a large step change in the guide point, often after a product changeover especially with a web width change. This adjustment can be made by directly sliding the visual guide point indicator track bar to the desired location; the track bar can be moved only when the web guide is in manual mode.

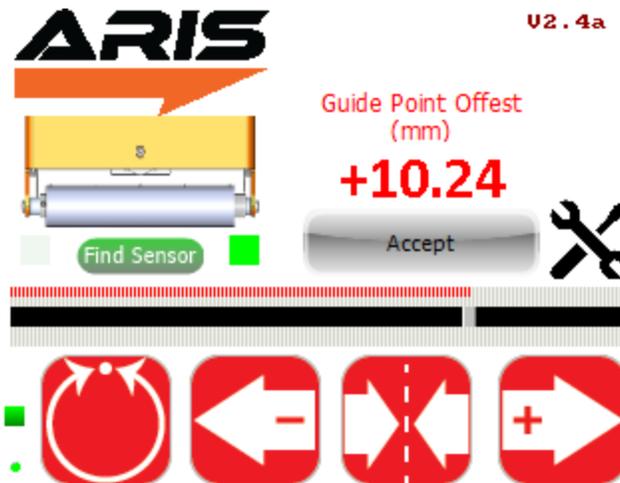


Fig. 15: Gross guide point adjustment

The change in the guide point needs to be confirmed by pressing the “Accept” button that appears whenever the track bar is moved. The confirmation is intended to prevent any accidental changes to the guide point. If the guide point change is not accepted within 10 seconds the change will be disregarded and the previously accepted guide point will be restored.

NOTE: The pressing of the Left (-) or Right (+) during fine guide point adjustment will momentarily change the icon to green as shown in Fig. 14. With the release of the button the icon changes the color back to red.

WARNING: The guide point adjustment operation result in change in the web guide position causing process upset. Caution must be exercised when performing this function and should be done by those who completely understand the consequence of this change.

WARNING: Fine guide point adjustment can be performed only when the web guiding system is in automatic mode. Pressing the Left (-) or Right (+) icons during manual operation will perform the jog operations.

WARNING: Guide point adjustment should be made only if it is necessary and should be carried out by personnel with good knowledge about the consequences of the change. The performance of the guiding system may deteriorate if the guide point is too far away from the desired 50% setting. Some of the changes might have no effect if the web guide is in an extreme position.

Web Position Indicators

Horizontal bar graph indicators (see Fig. 16) are available on the operator interface to indicate the position of the web as seen by the sensor. Both the edge position as well as the contrast position are indicated.

Depending on the position and orientation of the sensor the bar graphs may increase:

- from left to right for a sensor located on the right side of the web edge
- from right to left for a sensor that is located on the left side of the web edge.

The top web position indicator displays the right edge/contrast position of the web and the bottom web position indicator indicates the left edge/contrast position of the web. When two sensors (one left and one right) are connected or if a wide sensor is connected the edge position indicator may indicate both the left and the right edge of the web.

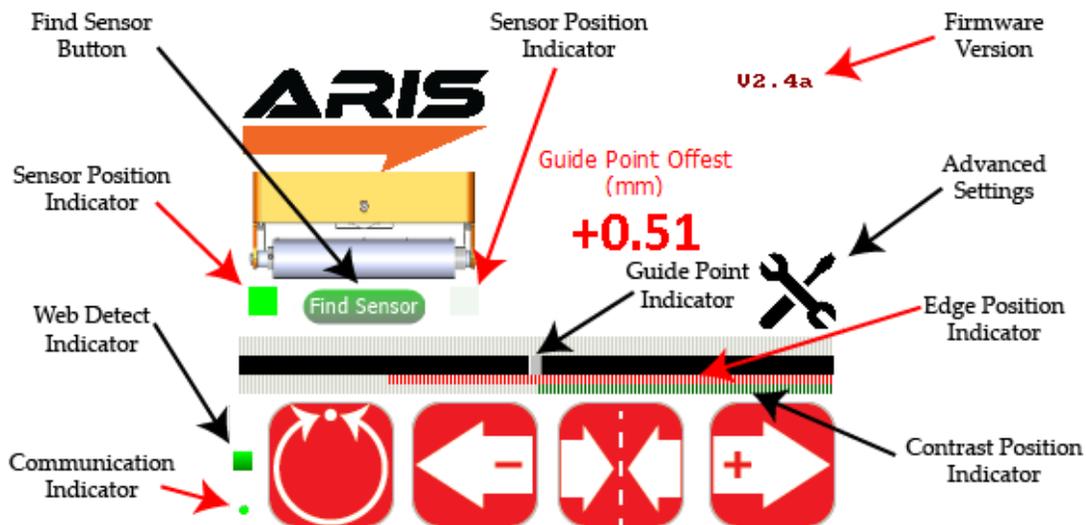


Fig. 16: ARIS WGS Operator Interface

Web Detected Indicator

A small square indicator on the bottom left part of the screen (see Fig. 14) indicates the presence and absence of the web as seen by the sensor.

- Whenever the sensor sees a web or a web edge, the indicator turns green.
- When the web is outside the sensing window the green indication goes off.

This web detect indicator can be used for troubleshooting purposes. If this indicator turns off intermittently while a web is in front of the sensor it may indicate that the sensor is finding it difficult to accurately sense the web. This indicates a low contrast condition for the sensor. Such a condition may occur for optical grade clear webs with low scattering in the infrared spectrum.

Sensor Position Indicator

The position of the sensor is indicated by two square indicators on the display (see Fig. 14) that are located downstream of the web guide picture.

- The indicator turns green to display the position and orientation of the sensor with respect to the guide and the web edge.
- If no sensor is attached to the web guiding system then both the indicators will turn gray.
- If two sensors (one right and one left) are attached to the web guiding system or if a wide sensor with center guiding option is used, both indicators will turn green.
- It is important to ensure that the sensor position indicator accurately indicates the actual position of the sensor with respect to the guide.
- The operator can find the correct position of the sensor by pressing the find sensor button that automatically detects the position of the sensor.

Find Sensor Button

The Find Sensor Button (see Fig. 16) can be used to automatically detect the position and orientation of the sensor with respect to the web guide and the web edge. Once the button is pressed the button will change state (as shown in Fig. 17) until the web edge is found.

- This button should be used whenever the sensor position is changed or when the edge orientation is changed.
- When the edge orientation changes, the bar graph will also change orientation.
- Find sensor button is activated only when the web guiding system is in manual mode.



Fig. 17: Find sensor operation

Communication Indicator

A round indicator at the left bottom of the operator interface (see Fig. 14) indicates the communication between the electronic controller board and the operator interface.

- This indicator is used for troubleshooting purpose.
- During normal operation this indicator will switch between red and green at a frequency of ~2 Hz.

Advanced Settings

The Low Profile Web Guide is a truly plug and play system without any need for setup or calibration. However, it may be necessary to adjust a few parameters in rare occasions based on the processing conditions. The advanced setting screen (see Fig. 18) will allow the user to adjust four parameters: edge/contrast sensing, motor speed, minimum contrast and web width (not available in all versions).

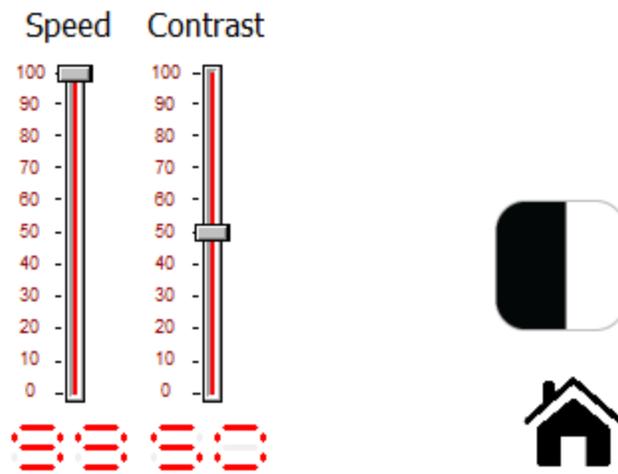


Fig. 18: Advanced settings screen

Motor Speed

In rare occasions when the web guide reaction speed needs to be reduced the speed slider can be used to vary the speed. The default setting corresponds to 99% of the maximum speed and the speed can be reduced all the way up to 0%. The speed reduction may be necessary while handling delicate material such as thin foils.

WARNING: When the speed is set to 0% the web guide will not respond in the automatic mode.

Minimum Contrast

When contrast web position sensing method is chosen the contrast slider can be used to set the minimum contrast that the web position sensor can detect. The default setting is 50 with a minimum of 0 and a maximum of 100. This relative scale adjusts the contrast sensitivity of the sensor output.

WARNING: The minimum contrast setting will have no effect when edge position sensing method is used.

WARNING: A very low contrast setting will make the sensor to be extremely sensitive to minute contrast difference.

Edge/Contrast Web Position Sensing



Edge sensing



Contrast sensing

Depending on the type of sensor (infrared or white light or ultraviolet) the Low Profile Web Guide can operate in either edge sensing mode or contrast sensing mode. The default configuration is edge sensing with infrared light source.

In edge sensing mode the sensor will look for the web edge scanning from the outside to the inside of the sensor. For a left sensor the scan goes from left to right, while for a right sensor the scan goes from right to left (see Fig. 19).

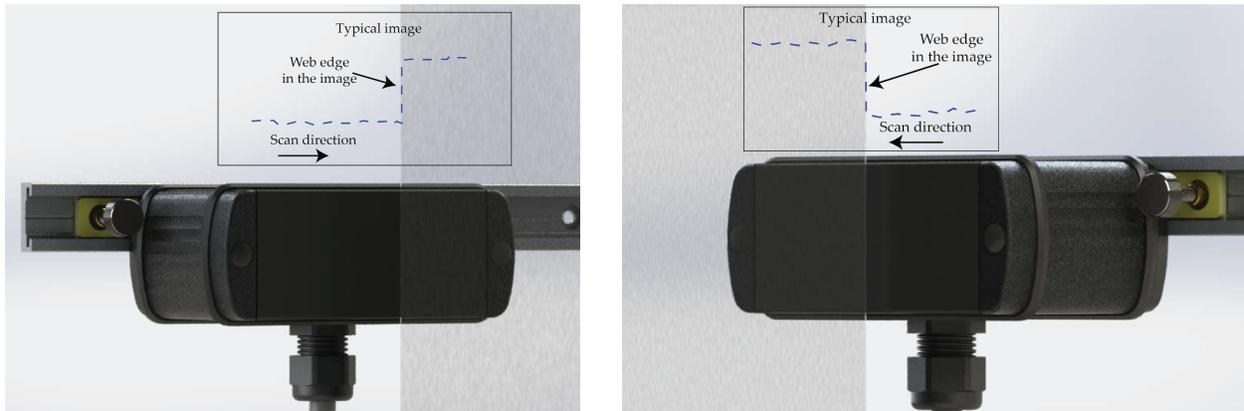


Fig. 19: Left sensor orientation (left) and right sensor orientation (right)

Contrast sensing mode is intended to be used only with white light sensor. This sensing mode can be used to detect a line or a contrast in the web. In contrast sensing mode the position, of the first contrast change in the web, as the sensor scans from inside to outside is detected. An additional setting to optimize the sensor performance (contrast adjustment) is available for advanced users through the advanced setting screen.

WARNING: Do not use contrast sensing method with an infrared sensor unless there is a specific need that has been already identified and tested.

WARNING: The Edge/Contrast sensing icon is visible, and can be used, only when the web guiding system is in manual mode.

WARNING: Both edge and contrast sensing method may work with white light. Additionally optical clear material may be difficult to sense with a white light option.

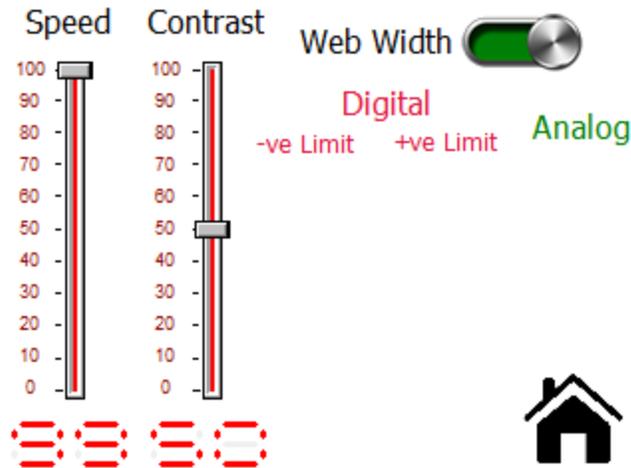


Fig. 20: Advanced Settings Screen (with width output options)

Web Width

Web width changes can be monitored in real-time for quality control purposes using the Low Profile Web Guide. The web width selection slider (only available in certain models) can be used to set the type of width output from the web guiding system. The output is an analog voltage based on the choice of width measurement or width monitoring. This setting is valid only when two sensors, one left and one right, or a wide sensor is used.

Analog Output

When the width output is set to be analog, the Low Profile Web Guide sends an analog output ranging between 0 to 10 Volts based on the percentage of the sensor(s) covered by the web. For example, with a wide sensor if the web covers 60% of the sensor window 6 Volts is output. If two sensors are used, one left and one right, then the output will be the total percentage of the two sensors covered by the web on either side.

Digital Output

The digital output option can be used for event based web monitoring. When this option is selected additional settings are available to the user as shown in Fig. 21.

WARNING: This option is not available on all the web guiding systems.

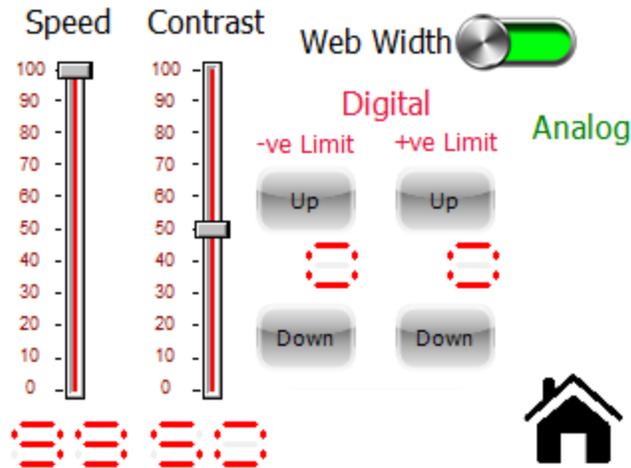


Fig. 21: Digital width output settings.

A lower (-ve limit) and an upper (+ve limit) web width tolerance can be set to trigger outputs based on web width. By default the lower and upper limits are set to zero. The resolution of the tolerances is in millimeters. By using the up and down buttons the lower limit and the upper limit can be changed. Any change in the limits must be accepted by pressing the “Accept Limits” button that becomes visible when the limits are changed (see Fig. 22). The nominal web width is recorded at the instant when the “Accept Limits” button is pressed. As soon as the “Accept Limits” button is pressed the button disappears indicating the limit acceptance as shown in Fig. 23.

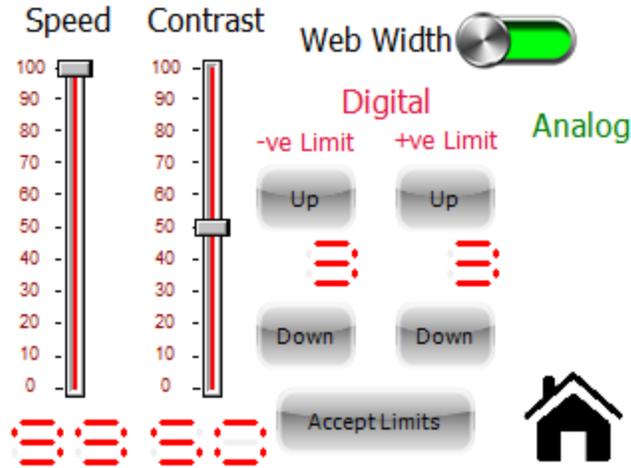


Fig. 22: Accept Limits button is visible after a limit change.

When the web width increases above the positive limit a positive high signal (+10V) is sent out by the Low Profile Web Guide. Similarly when the web width decreases below the negative limit a negative low signal (-10V) is sent out. When the web width is within the positive and negative width limits 0V is output.

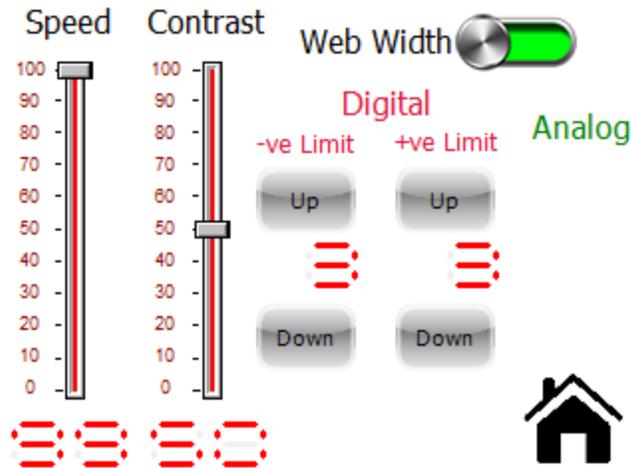


Fig. 23: User interface after the pressing Accept Limits button.

WARNING: If only one edge sensor is present then the output from the web guiding system, irrespective of the web width setting, will be an analog voltage between 0 to 10 Volts proportional to the web position (the percentage of the sensor covered by the web).

WARNING: Whenever a different web material with different nominal width is used the nominal width and the limits must be reset.

Remote Control and Monitoring

A set of input and output registers are available to monitor and control the web guiding system remotely.

Output registers

The output registers from the sensor provide information from the sensor. The data include status/fault information, sensor position information and sensor measurement quality information. The data from the sensor is organized in the following registers:

Register #	bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
0	Sensor 1 status/fault register															
1	Sensor 2 status/fault register															
2	Sensor 1 position output															
3	Sensor 2 position output															
4	Sensor 1 quality factor								Sensor 2 quality factor							
5	Web guide status/fault register															
6	Guide point percentage								Diagnostic index							
7	Motor speed percentage															

Sensor status and fault registers

The sensor status/fault register is organized as follow. The eight least significant bits correspond to fault information while the eight most significant bits correspond to status information.

Bit #	Value	Label	Description
0	0/1	No sensor	0: if a sensor is present 1: if no sensor is connected
1	0/1	Low contrast	0: if measurement contrast is high 1: if measurement contrast is low
2	0/1	No web	0: if web is detected by the sensor 1: if the sensor cannot detect a web

3	0/1	Wrong orientation	0: if sensor orientation is correct 1: if the sensor see an edge in the opposite orientation to which it is set up
4	NA		Reserved for future use
5	0/1	Flutter	0: if no flutter is detected 1: if the sensor detects flutter or out of plane movement in the web
6-7	NA		Reserved for future use
8	0/1	Left Sensor	0: if the sensor not set as a left sensor 1: if the sensor is set as a left sensor
9	0/1	Right Sensor	0: if the sensor not set as a right sensor 1: if the sensor is set as a right sensor
10-12	0-4	Number of pixels	The number of pixels in the sensor 0: 256 1: 768 2: 1774
13-15	0/2	Sensing mode	0: edge sensing mode 2: contrast position sensing mode

Note: If both the left sensor and the right sensor bits are set then the configuration corresponds to center sensor mode. For wide sensors (such as ARIS WPS 221) a single sensor may be used to measure the position of the two edges of the web, if the width of the web is smaller than the sensing window of the sensor.

Sensor position output register

The sensor position output register provides the absolute measurement in pixels. The output ranges from 0 to number of pixels in the sensor, and depending on the sensor orientation the output corresponds to edge position or contrast position. In order to convert the position into a physical unit, such as millimeters or

inches, the sensor resolution and the total pixel number of the sensor head are necessary. The following table provides a summary of the resolution and pixel count information for the different ARIS WPS models.

Model	Resolution	Total Pixel Count
ARIS WPS 16	0.0635 mm or 0.0025 in	256
ARIS WPS 48	0.0635 mm or 0.0025 in	768
ARIS WPS 221	0.125 mm or 0.005 in	1774

In either sensor orientation (left or right) the measured position increases as the web moves from left to right.

Note: *The output when the web completely covers the sensor or when the web is completely outside the sensor window would be different based on the sensor orientation.*

Sensor Orientation	Completely open	Fully covered
Left sensor orientation	Number of pixels	0
Right sensor orientation	0	Number of pixels

If no sensor is present then the value in the sensor position output register is meaningless.

With a wide sensor (such as ARIS WPS 221) center guiding with one sensor is possible if the width of the web is smaller than the sensing window of the sensor. When a single sensor acts as center sensor both the left and the right edge will be output via the industrial ethernet option. Irrespective of the sensor number the output for the left edge of the web is always available at the Sensor 1 position output register and the right edge of the web is available at the Sensor 2 position output register. **Note:** *If two sensors are connected and both are in center sensor mode the Sensor 1 position output and Sensor 2 position output will always correspond to the left and the right edge of the web seen by Sensor 1. Likewise for guiding purposes, the web guide will guide to the center of the web as measured by Sensor 1. The Sensor 2 output will be disregarded.*

Quality factor registers

The quality of the sensor measurement from the two sensors are provided in register 4. Higher number corresponds to good quality measurement while a low number indicates lower quality. The value of the quality factor ranges from 0 to 256. The eight most significant bits of register 4 corresponds to the 8-bits quality factor from sensor 1 while the eight least significant bits corresponds to the quality factor of sensor 2.

Web guide status and fault registers

Bit #	Value	Label	Description
0	0/1	No operator interface	0: if no operator interface is detected 1: if an operator interface is detected

1	0/1	No motor driver	0: if no motor driver is detected 1: if a motor driver is detected
2	0/1	Motor fault detected	0: if motor motor function is normal 1: if a motor fault is detected
3	0/1	Disturbance detected	0:if no disturbance is detected 1: if a disturbance is detected
4	0/1	Traction issue detected	0: if no traction issue is detected 1: if a traction issue is detected
5	0/1	Upstream misalignment	0: if no upstream misalignment is detected 1: if an upstream misalignment is detected
6	0/1	Guide extreme position	0: if the web guide is within the normal position 1: if the web guide is in an extreme position
7	0/1	High frequency disturbance detected	0: if a high frequency disturbance is detected 1: if no high frequency disturbances are detected
8	0/1	Manual/Auto	0: if the web guide is in manual mode 1: if the web guide is in automatic mode
9	0/1	Jog Left operation	0:if the web guide is not jogging left 1: if the web guide is jogging left
10	0/1	Jog Right operation	0: if the web guide is not jogging right 1: if the web guide is jogging right
11	0/1	Servo Centering operation	0: if the web guide is not servo centering 1 if the web guide is servo centering

12	0/1	Good guiding performance	0: if the guiding performance is not good 1: if the guiding performance is good
13-15	NA		Reserved for future use

Guide point percentage

The guide point for the web guide is provided in this register. The value of the guide point range between 0 and 100, representing the guide point as a percentage of the sensor range. A value of 50 indicates that the guide point is at the middle of the sensing window while a value of 25 means the guide point is at the 25% of the sensor window (left of the middle) while a value of 75 means the guide point is at 75% of the sensor window (right of the middle). The eight most significant bits of register 5 provide the guide point percentage output.

Diagnostic index

The diagnostic index output is only available with web guiding that include the KOIOS diagnostic index. The value ranges between 0 and 100. For more details please refer to the KOIOS diagnostics product manual. The eight least significant bits of register 5 provide the diagnostic index output.

Motor speed percentage

The motor positioning speed as a percentage of maximum speed is output in register 7. The value ranges between 0 and 100.

Sensor input registers

Sensor input registers are control registers that are used to control/configure the parameters of each sensor. One 16-bit command register for each sensor is available for an external device to set the sensor parameters. The input registers are mapped as shown below:

Register #	bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
0	Sensor 1 command register															
1	Sensor 2 command register															
2	Guide command register															
3	Guide point offset register															
4	Motor speed percentage register															

Sensor command register

Bit #	Value	Label	Description
0-1	0/2	Sensor orientation	0: set sensor orientation to be right sensor 2: set sensor orientation to be left sensor Note: Changing this value will take effect only if bit 5 is set to 1. The auto switch mode needs to be disabled to take control of the sensor orientation through this register.
2-3	0/1		Reserved for future use
4	0/1	Sensing mode	0: set the sensing mode to be edge mode 1: set the sensing mode to be contrast mode
5	0/1	Disable auto switch off	0: Automatic switch is enabled 1: Automatic switch is disabled Note: This bit needs to be set in order to force the sensor orientation externally. If this bit is cleared to zero the sensor will maintain the previous orientation until the sensor automatically detects the sensor orientation when (1) find sensor is enabled or (2) when a new sensor is plugged into the sensor port.
6	0/1	Find sensor	0: Disable find sensor operation 1: Enable find sensor operation by resetting the orientation and allowing the sensor to detect the web orientation. Note: This bit is momentary when set to one. Every time the find sensor operation needs to be enabled the bit needs to be cleared to zero before setting it to one.
7	0/1	Disable analog output	0: Enables the analog output for the sensor 1: Disables the analog output for the sensor
8-15	0-255	Minimum contrast	Minimum contrast: Minimum contrast required to accept an edge in contrast mode Default value is 50.

Web guide command register

Bit #	Value	Label	Description
0-7	NA		Reserved for future use
8	0/1	Remote control	0: if cleared to zero, the local operator interface have control over the web guide 1: if set to one, the remote ethernet controller has control over the web guide. The interface icons to control the web guide on the local operator interface will be disabled. Information for monitoring purposes will be displayed on the screen.

9	0/1	Manual/Auto mode	<p>0: if cleared to zero, the web guide will be placed in the manual mode</p> <p>1: if set to one, the web guide will be placed in the automatic mode</p>
10	0/1	Jog Left or decrease guidepoint	<p>This bit performs two functions based on bit 9.</p> <p>If bit 9 is cleared:</p> <ul style="list-style-type: none"> 0: Stop Jog Left operation 1: Start Jog Left operation <p>Note that this register is a write only register and will not change state if the web guide reaches the extreme position.</p> <p>If bit 9 is set:</p> <ul style="list-style-type: none"> 0: will clear the register and has no effect 1: will decrease the guide point by 0.254 mm or 1/100th of an inch from the current value. <p>Note that this value on this register is momentary. Before decreasing the guidepoint the bit needs to be cleared before setting it to one. Note that the guide point cannot at the extremes of the sensing window and will automatically truncated if the extreme limit is reached. The extreme limit depends on the sensor resolution and sensor width.</p>
11	0/1	Jog Right or increase guidepoint	<p>This bit performs two functions based on bit 9.</p> <p>If bit 9 is cleared:</p> <ul style="list-style-type: none"> 0: Stop Jog Right operation 1: Start Jog Right operation <p>Note that this register is a write only register and will not change state if the web guide reaches the extreme position.</p> <p>If bit 9 is set:</p> <ul style="list-style-type: none"> 0: will clear the register and has no effect 1: will increase the guide point by 0.254 mm or 1/100th of an inch from the current value. <p>Note that this value on this register is momentary. Before increasing the guidepoint the bit needs to be cleared before setting it to one. Note that the guide point cannot at the extremes of the sensing window and will automatically truncated if the extreme limit is reached. The extreme limit is set such that at least ± 3.175 mm is available on either side of the adjusted guide point.</p>
12	0/1	Servo Center operation or set guide point	<p>This bit performs two functions based on bit 9.</p> <p>If bit 9 is cleared:</p> <ul style="list-style-type: none"> 0: No effect 1: Start Servo Center operation <p>Note that this register is a write only register and will not change state if the web guide reaches the center position. Note that this value on this register is momentary. Before a servo center operation the bit needs to be cleared to zero before setting it to one.</p> <p>If bit 9 is set:</p> <ul style="list-style-type: none"> 0: will clear the register and has no effect

			<ul style="list-style-type: none"> 1: will set the guide point to be at 50% of the sensing window. <p>Note that this value on this register is momentary. Before decreasing the guidepoint the bit needs to be cleared before setting it to one. The extreme limit is set such that at least ±3.175 mm is available on either side of the adjusted guide point.</p>
13	0/1	Enable arbitrary gross guide point adjustment	<p>This bit allows arbitrary gross adjustment of the guide point offset through the industrial ethernet interface.</p> <p>0: if cleared to zero, gross guide point adjustment is disabled</p> <p>1: if set to one, the remote ethernet controller can make arbitrary gross adjustment to the guide point by writing a 16-bit signed integer to the guide point register.</p>
14-15	NA		Reserved for future

WARNING: All the remote control operations may cause the web guide to move without operator intervention. This process may cause process upsets. Caution must be exercised when performing these function and should be done by those who completely understand the consequence of this change.

WARNING: Low Profile Web Guide is an automatic control device that may stop and start at any time without notice, especially when controlled remotely. Hence standard safeguards must be in place to prevent any kind of injury.

WARNING: The remote control options provides significant access and control of the web guide and the sensor. A combination of the settings may create conditions that might not be ideal for web guiding. Hence only the personnel familiar with the web guide operation should program the remote control interface. Contact Roll-2-Roll Technologies' technical support team for any question or assistance.

Guide point offset register

If the 13th bit of the web guide command register is set, then arbitrary guide point adjustment can be made by writing a 16-bit signed integer value to the guide point offset register. The offset value is the distance from the desired guide point location to the middle of the sensor window. A positive offset value will result in a guide point location towards the right half of the sensor window while a negative offset will result in a guide point location towards the left half of the sensor window. The guide point offset in mm = 0.0635*(the 16-bit guide point offset register).

Motor speed register

The positioning speed of the actuator can be changed by setting the 7th bit of the register to 1 and writing a value between 0 and 100 in the 7 least significant bits. If the 7th bit is low then the value written in the register is ignored. Any value in the 15th to 8th bit within the register is also ignored.

Communication Module

Off-shelf industrial ethernet modules from [HMS industrial](#), are used in the ARIS SCU C(E)/MC(E) to provide ethernet connectivity. A 4-pin D-coded M12 socket connect is provided for ethernet connection. Standard network cables can be used to connect the ARIS SCU C(E)/MC(E) to an ethernet network using RJ45 plug.

IP Address


The ARIS SCU C(E)/MC(E) is configured to automatically acquire an IP address from a DHCP router or a server. As soon as the controller is connected to a network, an IP address is automatically assigned to the device. Before starting the configuration procedure find the IP address of the controller on the network.

Finding the IP Address


Once the controller is powered ON, the controller will automatically connect to the network. The controller is configured to get the IP address automatically from a DHCP server. Hence the controller should be connected to a network where dynamic IP addresses are issued by a network device such as a router.

A network port scan utility can be used to find the controller. Alternatively the [IPConfig](#) utility available in the software section of the [HMS Industrial website](#) can be used to scan for the device. The actual device used is **Anybus-IC EtherNet/IP ORDER CODE: AB6003**.

Once the utility is installed the program can be run to find the AnyBus IC module on the ARIS SCU C(E)/MC(E). The following shows the opening screen of the IPconfig utility.

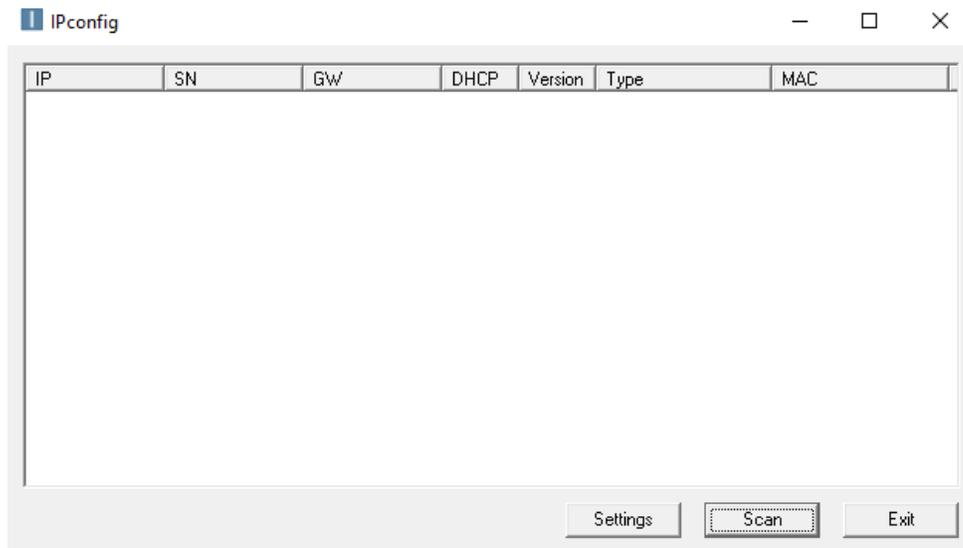


By pressing the scan button all the devices on the network from HMS Industrial network can be found. For example, the utility would find the device and list it as shown below.

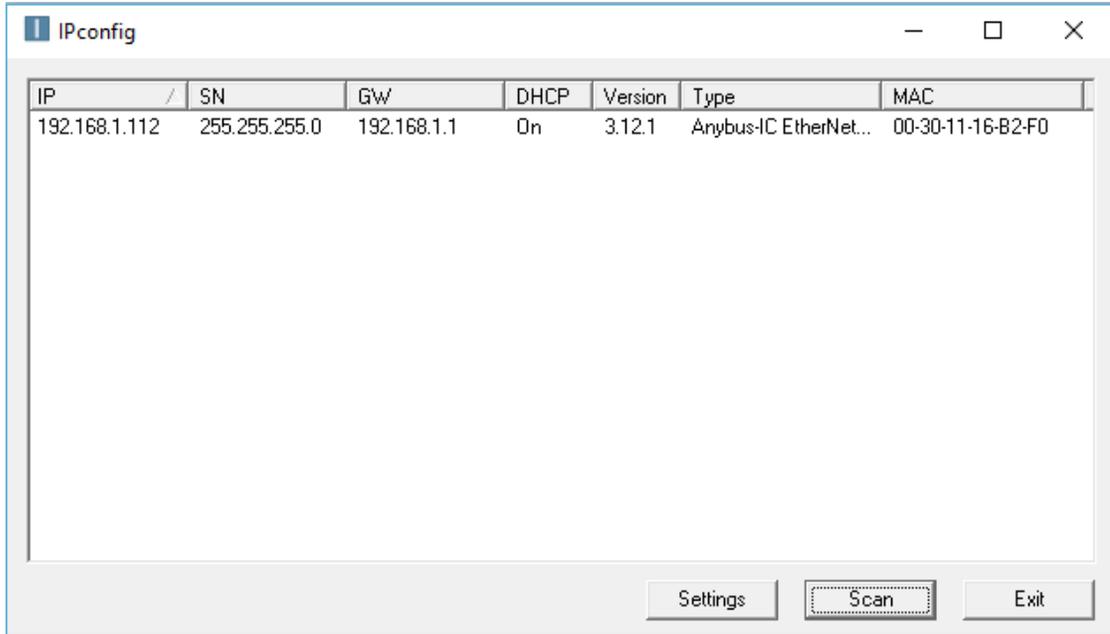


Information such as IP address, DHCP state, Type of module and the MAC address is displayed.


Setting a static IP address for the controller

Double clicking on the desired device listed in the IPConfig window would bring a screen to configure the Static/Dynamic IP address setting as shown below. By selecting the DHCP setting to be off, static IP address can be configured for the device.

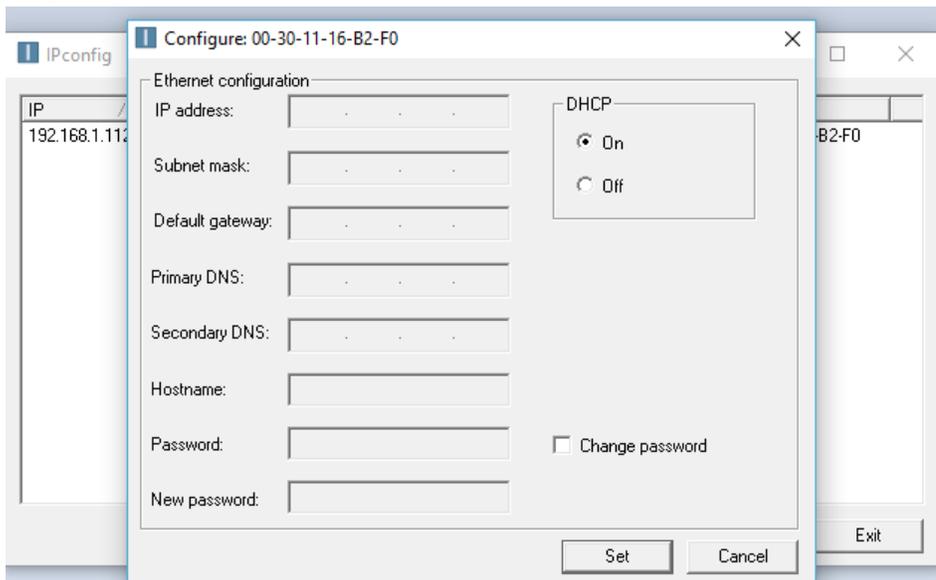

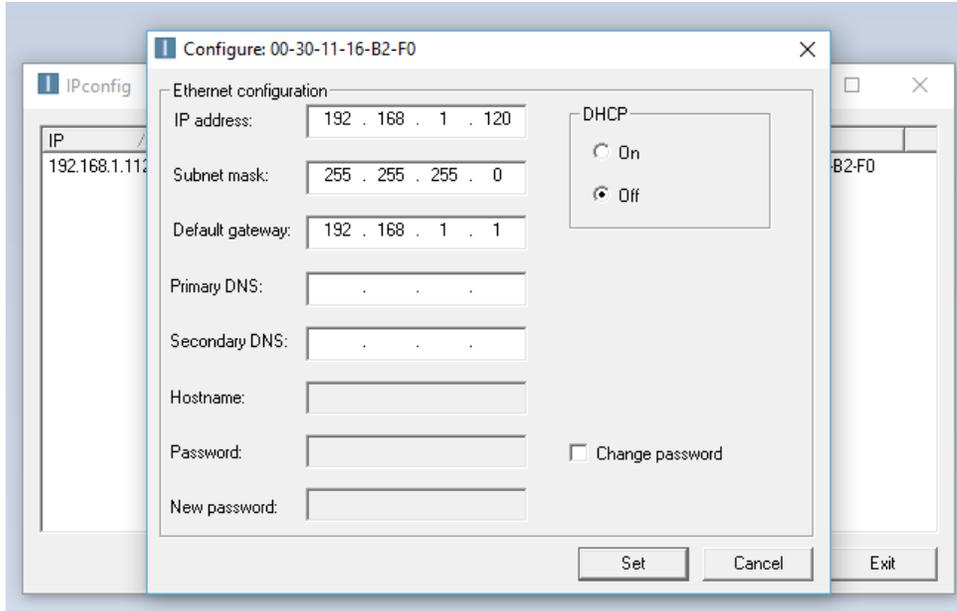

By clicking on the “Set” the static IP address can be set. Once the static IP address is set the IPconfig utility will refresh to show the new configuration. The DHCP setting will be set to “OFF” state and the new IP address will be assigned to the device as shown below.

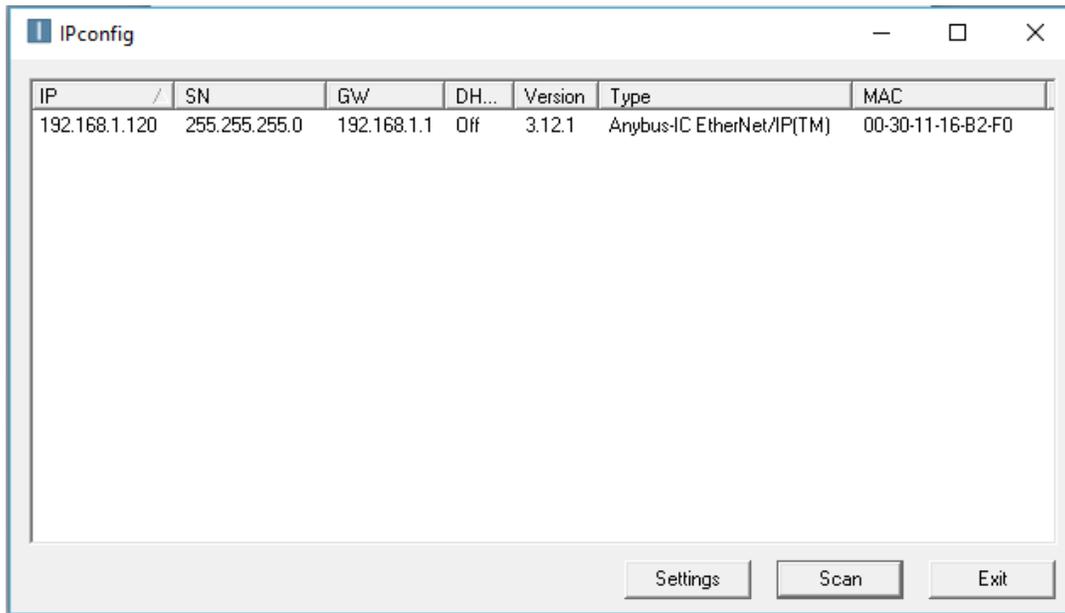

COMMISSIONING

A properly installed web guide requires correct threading of the web over the guide rollers and initial positioning of the sensor. Once the material is threaded over the guide rollers and the sensor has been properly positioned, all the operator has to do is to press the automatic operation icon on the operator interface.

The following section describes the steps and conditions required for automatic operation of the Low Profile Web Guide.

1. Power ON the system
2. Automatic/Manual operation set to “Manual” (Automatic/Manual icon pressed to red)
3. Jog the guide to left extreme and then to right extreme to correct for any transportation related guide roller assembly movements.
4. Press the Servo-Center button to center the guide rollers.
5. Thread the material over the rollers depending on the web path configuration as shown in Fig. 8. The material wrapped over the rollers must be at a 90 degree angle both at the entry and exit of the guide rollers.
6. Verify that the material is aligned in the desired position with respect to the upstream and downstream position of the web. Place web under normal operation tension.
7. Adjust sensor position on the desired edge of the web. Then manually position the sensor so that the edge of the web is at the middle of the sensing window. This can be done by observing the web edge position indicator on the display. When the bar is in the middle position then the web edge is in the middle of the sensing window.
8. If the sensor position indicator and the actual position of the sensor are different then press the “Find Sensor” button on the operator interface so that the guiding system automatically find the correct orientation of the edge sensor. In order for this function to work the web edge needs to be in the middle of the sensing window.
9. Secure the sensor position on the sensor rail.
10. Press the Automatic/Manual operation icon to “Automatic” (Automatic/Manual icon pressed to green).
11. The guide will automatically adjust the position of the web material to guide it to the correct position.

General Maintenance

The Low Profile Web Guide is virtually maintenance free. However, the sensor lid should be cleaned to remove any dust particles that might accumulate on the surface.

- You may use any lens cleaning solutions available in the market.
- Do not use petroleum based products as these can damage the sensor cover and affect its performance.

This cleaning can be done as part of a weekly maintenance schedule or as required by usage or environmental conditions.

TROUBLESHOOTING

Problem	Probable Cause	Action
<p>Sensor indicator does not light up and the sensor does not find the web.</p>	<p>Background or faulty sensor cable or connection.</p>	<ul style="list-style-type: none"> * Ensure that the background in the field of view of the sensor is dark. Any bright surfaces may reduce the contrast levels and can prevent automatic find sensor operations. * Ensure that the sensor cable is properly connected. Disconnect the cable and reconnect it and use the find sensor button procedure. * If that does not fix the problem try a different sensor head. * If that does not fix the problem please call support.
<p>The touch screen does not work and the communication indicator is not blinking.</p>	<p>Communication between the electronic hardware and the operator interface is lost.</p>	<ul style="list-style-type: none"> * Power cycle the web guiding system to see if the communication is reestablished. * If that does not fix the problem, please call support.
<p>The web guide is not moving in automatic mode.</p>	<p>Faulty cable or connection. or Software soft stop reached.</p>	<ul style="list-style-type: none"> * Check the sensor cables and connection to ensure that the sensor sees the web. * If the sensor works properly, then try to manually jog the web guide away from the center position. The web guide will stop jogging when the software soft stop is reached. While jogging, the actuator may produce a noise because of the hard stop. It is normal. Once the software stops jogging, push the automatic button again. * If that does not fix the problem, please call support.

APPLICABLE MODELS

Sensor

Model Number	Description	Part Number
ARIS WPS 16-IR	Light source: Infrared; Width: 16 mm	3-000011
ARIS WPS 48-IR	Light source: Infrared; Width: 48 mm	3-000012
ARIS WPS 48-WL	Light source: White light; Width: 48 mm	3-000022
ARIS WPS 48-UV	Light source: Ultraviolet; Width: 48 mm	3-000032
ARIS WPS 221-IR	Light source: Infrared; Width: 16 mm	3-000014

Control Unit

Model Number	Description	Part Number
ARIS SCU5 MD	Basic controller + integrated touch screen display	4-100121
ARIS SCU5 MC(E)	Basic controller + industrial ethernet (Ethernet/IP)	4-100112
ARIS SCU5 MC(P)	Basic controller + industrial ethernet (PROFINET)	4-101112
ARIS SCU5 MC(E)D	Basic controller +Ethernet/IP + integrated touchscreen display	4-100111
ARIS SCU5 MC(P)D	Basic controller +PROFINET + integrated touchscreen display	4-101111

Web Guide Mechanism

Model Number	Description	Part Number
WMS G250-50-NC-LP	Web guide mechanism: 50 mm diameter, 250 mm wide roller	5-251111
WMS G300-50-NC-LP	Web guide mechanism: 50 mm diameter, 300 mm wide roller	5-251112
WMS G375-50-NC-LP	Web guide mechanism: 50 mm diameter, 375 mm wide roller	5-251113
WMS G425-50-NC-LP	Web guide mechanism: 50 mm diameter, 425 mm wide roller	5-251114
WMS G500-50-NC-LP	Web guide mechanism: 50 mm diameter, 500 mm wide roller	5-251115

TECHNICAL SUPPORT AND SERVICE

Contact information

Roll-2-Roll Technologies LLC is dedicated to providing exceptional service and support to its customers. Please feel free to contact us for any technical support, installation support and service requirements.

Roll-2-Roll Technologies LLC
1110 S Innovation Way Dr
Stillwater, OK 74074
Website: <https://www.r2r-tech.com>

Technical Support Phone: +1 (888) 290-3215 - ext 3
General Support Phone: +1 (888) 290-3125 - ext 1

Technical Support Email: engineering@r2r-tech.com
General Support Email: support@r2r-tech.com

Return shipping instructions

Please contact us to obtain a return merchandise authorization (RMA) number before returning the product to us. If returning the product, please follow the instructions on the RMA form for quick and efficient service.

REVISION HISTORY

Document Revision

Version	Date	Changes
1.0	Sep 2015	Initial Release Version
1.1	Feb 2016	Comprehensive revision and new sections added: safety instructions, mounting dimensions, troubleshooting, specifications.
2.0	Jun 2016	Updated documentation for SCU V4 Rev D hardware, firmware and OI.
2.2	Dec 2016	Updated documentation for firmware updates and usability changes
2.4	Jul 2017	Updated documentation for firmware updates and operator interface changes


Hardware Revision

Version	Date	Description
SCU V2	Dec 2014	Initial version with 12 VDC input
SCU V3	Jun 2015	Expanded version with 24 VDC input
SCU V4 Rev B	Oct 2015	Two sensor option, WDT, RTCC
SCU V4 Rev C	Mar 2016	Analog Output
SCU V4 Rev D	July 2016	Industrial ethernet option

Firmware Revision

Version	Date	Description
1.0	Jan 2015	Initial version, single sensor
1.1	Aug 2015	Firmware update for SCU V3, automatic sensor state detection
1.2	Nov 2015	Firmware update for SCU V4 Rev B. Modified sensor algorithm to increase precision and accuracy.
1.3	Dec 2015	Two sensor option with automatic pixel detection
1.4	Mar 2016	Background suppression algorithm
1.5	Apr 2016	Analog output
2.1a	Aug 2016	Firmware update for SUC V4 Rev D

2.2b	Dec 2016	Ethernet/IP implicit messaging, edge detection algorithm updates
2.4a	Jun 2017	Changes to guide point adjustment

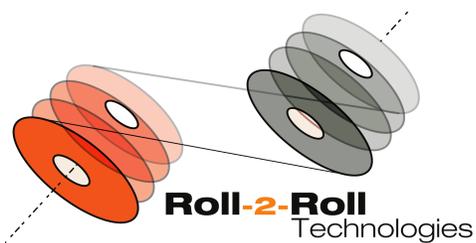

Roll-2-Roll Technologies LLC
1110 S Innovation Way Dr
Stillwater, OK 74074
www.r2r-tech.com
info@r2r-tech.com
+1-(888)-290-3215