


2. REMOVE ALL BURRS AND SHARP EDGES.

3. ALL SURFACES ARE TO BE FREE OF CONTAMINATES PRIOR TO FINISH OR SHIPPING.

4. BAG OR TAG PART(S) WITH

5. MATERIAL:

6. FINISH:

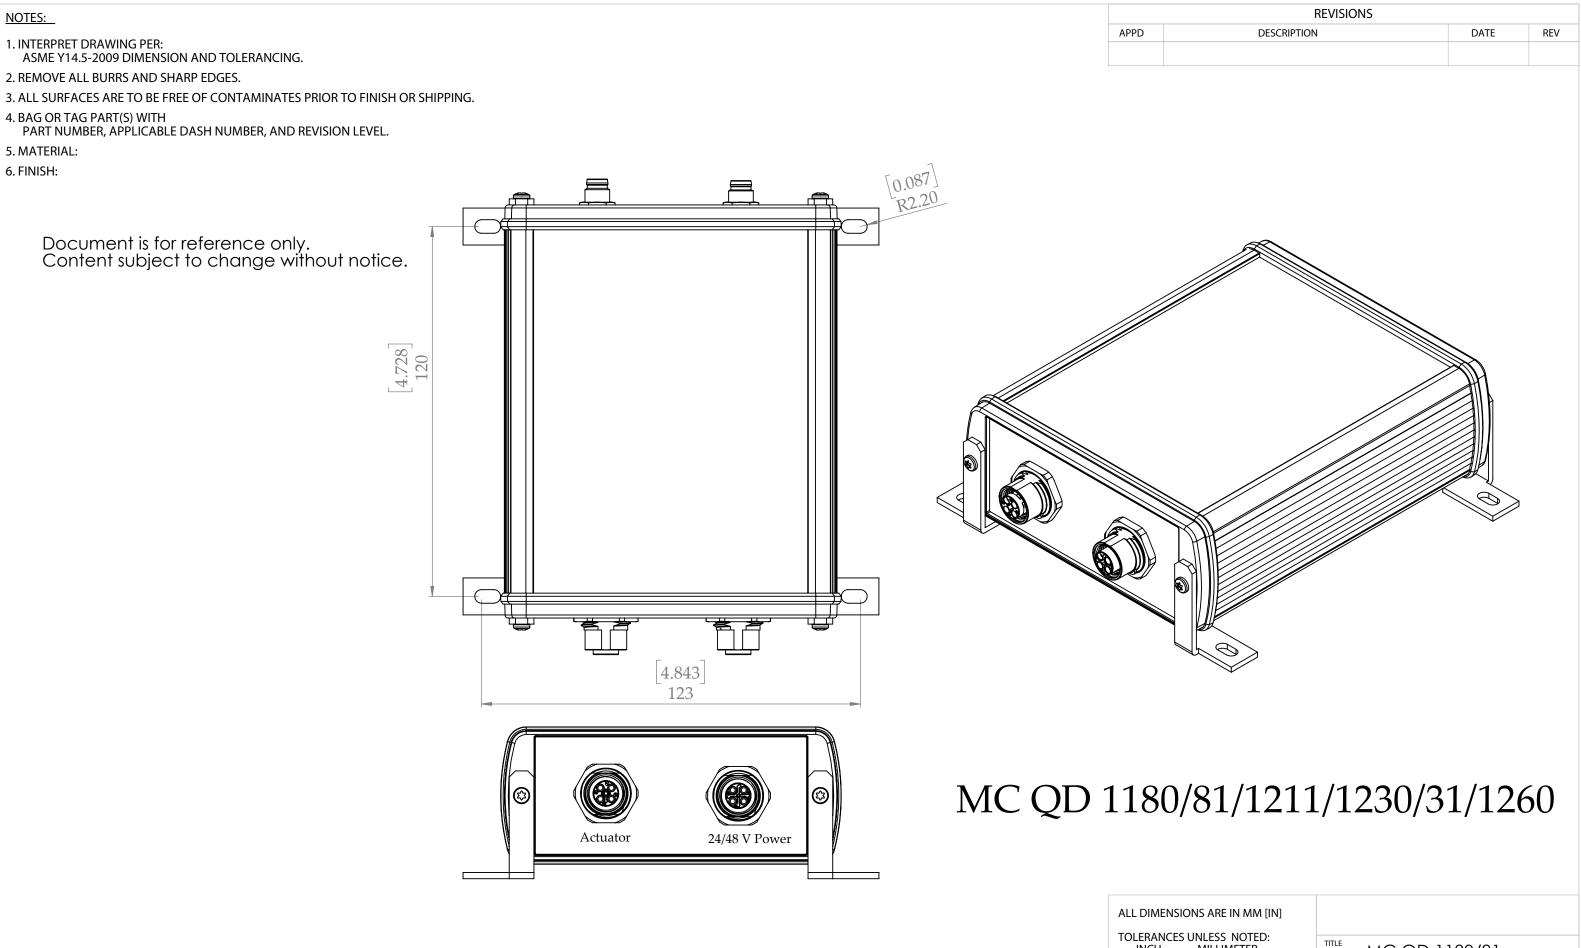

THIRD ANGLE PROJECTION

INCH MILLIMETER X.XX +/- 0.01 X.X +/- 0.3 X.XXX +/- 0.005 X.XX +/- 0.1

MC QD 1180/81

DWG NO

REV